

Quick Setup CSM **SL720** gyro

- Turn on radio and toggle gain switch until servo zips to acknowledge.
- Push rudder stick left and right. Check REV LED changes.
- Push stick to left and release. Check tail is at left pitch (if not, see Appendix F in manual)
- Toggle gain switch to set REV state, servo zips to acknowledge.
- Push stick left and right. Check VF LED changes.
- Set VF on or off as required.
- Toggle gain switch to set VF state, servo zips to acknowledge.
- Servo travels to first throw limit.
- Use stick to adjust limit to required value.
- Toggle gain switch to set limit, servo zips to acknowledge.
- Servo travels to second throw limit.
- Use stick to adjust limit to required value.
- Toggle gain switch to set limit, servo zips twice to indicate end of Quick setup.

Quick-trim

- Hover helicopter nose into wind or in slow forward flight.
- Toggle gain switch five times slowly (one click per second) between Mode 0 and Mode 1

At a glance: **SL720** Quick Reference Guide

